

Head Office: ARB Corporation Ltd Postal Address: PO Box 105, Kilsyth 3137 Australia Street Address: 42 - 44 Garden Street Kilsyth, Victoria 3137 Australia

Tel: +61 3 9761 6622 • Fax: +61 3 9761 6807

www.arb.com.au ABN 31 006 708 756

FITTING INSTRUCTIONS OMECW1 & OMECW2 CASTOR WEDGES

VEHICLES WITH SPRINGS UNDER AXLE HOUSING

Increase Castor Angle: Thin edge of wedge pointing rearward.

Decrease Castor Angle: Thick edge of wedge pointing rearward.

VEHICLES WITH SPRINGS ABOVE AXLE HOUSING

Increase Castor Angle: Thick edge of wedge pointing rearward.

Decrease Castor Angle: Thin edge of wedge pointing rearward.

CAUTION:

UNEQUAL WEDGES FITTED SIDE TO SIDE WILL NOT CORRECT SIDE TO SIDE CASTOR.

INSTALLATION:

- 1. Loosen U bolts.
- 2. Insert correct degree castor wedge between spring seat and spring.
- 3. Ensure centre bolt locates castor wedge and engages spring seat.
- 4. Retighten U bolts to manufacturer's specification.

NOTE: After installation wheel alignment measurements should be rechecked to ensure that positive castor meets manufacturer's specifications.