

Product Description: BASE RACK – JOINED RACK

WARNING

- The ARB BASE RACK system has a maximum capacity of 25kg per cross slat. Exceeding this limit may result in damage or failure
- This product must be installed exactly as per these instructions using only the hardware supplied
- This product or its fixing must not be modified in any way
- These instructions are correct as at the publication date
- Work safely at all times
- Unless otherwise instructed, tighten fasteners to specified torque
- Fastener torques are to be checked at regular intervals

ARB 4x4 ACCESSORIES

Corporate Head Office

www.arb.com.au

42-44 Garden St Kilsyth, Victoria AUSTRALIA 3137 Australian enquiries North & South American enquiries Other international enquiries Tel: +61 (3) 9761 6622 Fax: +61 (3) 9761 6807

> sales@arb.com.au sales@arbusa.com exports@arb.com.au

REQUIRED TOOLS FOR FITMENT OF PRODUCT:

T20 TORX DRIVER

T45 TORX DRIVER

FASTENER TORQUE SETTINGS:

SIZE	Torque Nm	Torque lbft	
M6 – LOW HEAD	5Nm	3.5lbft	
M8	22Nm	16lbft	

PARTS LISTING			
APPLICATION.	PART NO.	QTY	DESCRIPTION
	3163303	2	RACK JOINER RUBBER TRIM
	3753084	2	BRACKET BASE RACK JOINER MAIN
	3753084	2	BRACKET BASE RACK JOINER DOVETAIL FORGED
E3	6152060	8	SCREW PHD M8X16 TORX BLACK
	6152061	4	SCREW PHD M6x10 TORX BLACK LOW HEAD
	4584328	4	WASHER FLAT M8x19x1.2 LARGE
	4584359	4	WASHER FLAT M8x15x2 SMALL
	-	1	RACK SECTION "A"
	-	1	RACK SECTION "B"

FITTING PROCEDURE				
	1. Insert the Brackets into the Rubber Trims as shown			
	 Insert the Brackets and Rubber Trim into one section of the rack as shown Repeat on other side 			
Large	 4. Loosely fit the fasteners The M6 Screw fit through the hole in the dovetail 1xM8 Screw and small washer on the bottom of the rack 1xM8 Screw and large washer from the inside face of the rack 5. Repeat on other side 			
	6. Push the other rack section over the Brackets and Rubber Trim			



