				CONTE	KOLLE	
		IINO-R		K		
Important		ction to ensure that the roof racks are inst	-	cations.		
		commencing fitment and report any discr				
	3. Place these instructions in the v	ehicle's glove box after installation is com	blete.			
Layout	4. These instructions must be follo	These instructions must be followed for warranty to be upheld.				
Note: C	rossbars and legs sold as separate.					
	-	ty: 100kg (220lbs) evenly dis	tributed over o	crossbars.		
	On Road Cargo Allowance	Off Road Cargo Allowance	Roof Allowance	Rack Weight	]	
	95kg / 209lb	63kg / 138lbs	100kg / 220lbs	5kg / 11lb		
be check distances (see page low as po Caution:	ed again at regular intervals (probably travelled). You should also check the 2 for advisory diagrams). Please en ssible.	e crossbars each time they are refitte sure that all loads are evenly distribu	on road conditions, d. Make sure to fas red and that the cer	usage, loads and ten your load sec ntre of gravity is k	l curely cept as	
It is esser be check distances (see page low as po <b>Caution:</b> - The han you exerc cornering - In heavy be quickly - When fit check the <b>Note for</b>	ed again at regular intervals (probably travelled). You should also check the e 2 for advisory diagrams). Please en ssible.	r once a week is enough, depending of e crossbars each time they are refitte sure that all loads are evenly distribu anges when you transport a load on t vind-resistant loads. Special consider <b>ars when putting vehicle through a</b> eased wind noise may be experience a level become annoying. f bars have approximately 10mm clea ation. If not, remove crossbars.	on road conditions, d. Make sure to fas red and that the cer ne roof. For safety ation must be taker <b>n automatic car w</b> d within the cabin. F rance. After loading	usage, loads and ten your load sec ntre of gravity is k reasons we reco n into account wh rash. Roof racks are de g up your roof ba	t urely ept as mmend en signed to rs always	



