


RHINO-RACK

VACB Hardware Kit

Item	Component Name	Qty	Part No.
1	M8 nyloc nut	2	N028
2	M8 x 17mm flat washer	2	W020
3	M8 x 16mm T-bolt	2	B018
4	Instructions	1	R1671

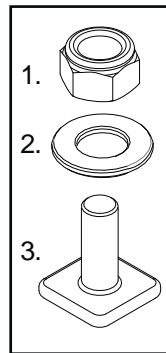

Note:

For use with BC2,3 and 4 when mounting to VA crossbars.

Tools require:

13mm socket wrench.

1 Install the hardware as shown into the A127 K bracket from your conduit clamp kit. Finger tighten only at this stage.

A127 K bracket.

B018.

N028.

W020.

2 Slide the assembly into place and tighten to 10-12Nm with a 13mm socket wrench.


3 Install the remainder of the conduit bracket as illustrated in RR106 BC2-4 instructions.

Document: R1671
 Prepared by: Kayle Everett
 Authorised: Chris Murty
 Issue: 01
 Date: 09/11/17

RHINO-RACK

VACB Hardware Kit

Item	Component Name	Qty	Part No.
1	M8 nyloc nut	2	N028
2	M8 x 17mm flat washer	2	W020
3	M8 x 16mm T-bolt	2	B018
4	Instructions	1	R1671

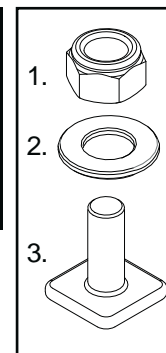

Note:

For use with BC2,3 and 4 when mounting to VA crossbars.

Tools require:

13mm socket wrench.

1 Install the hardware as shown into the A127 K bracket from your conduit clamp kit. Finger tighten only at this stage.

A127 K bracket.

B018.

N028.

W020.

2 Slide the assembly into place and tighten to 10-12Nm with a 13mm socket wrench.

3 Install the remainder of the conduit bracket as illustrated in RR106 BC2-4 instructions.

Document: R1671
 Prepared by: Kayle Everett
 Authorised: Chris Murty
 Issue: 01
 Date: 09/11/17