


**SECTION 1: PREPARING THE VEHICLE TUB AND BED LINERS –REMOVAL OF SPORTS BARS & BED LINERS AND SEALING THE TUB.**


- 1.1) Remove any sports bars fitted on the front bed rail of the vehicle's tub.
- 1.2) The sports bar will need to be returned to the customer if requested to do so.
- 1.3) Remove and retain all bed liner components and tie down hook hardware.

**NOTE :- IF FITTING A CANOPY TO A FORD RANGER XL & XLS MODEL YOU MUST PURCHASE THE 4740020 STOP LIGHT COVER KIT SEPARATELY**

**SECTION 1A: REMOVING THE CENTRE HIGH MOUNTED STOP LIGHT ON FORD RANGER XL-XLS MODELS**

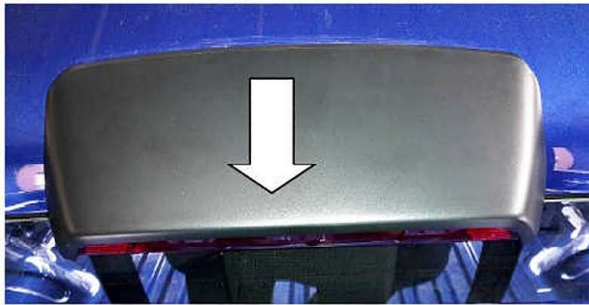


1.4) Remove the CHMSL Cover by pulling the cover towards the rear of the vehicle.

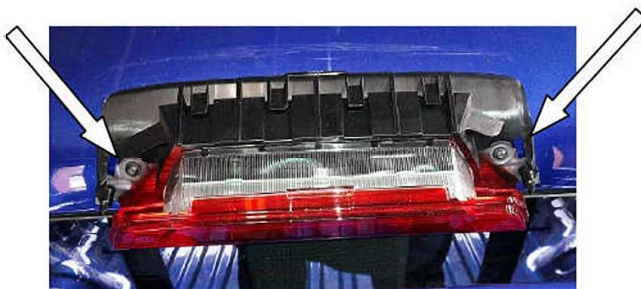

1.5) Using a T15 torx key, unscrew the two retaining screws and remove the light housing (Retain the two screws as they will be required later for retaining the cover)



1.6) Unclip the light from the loom and remove, using masking tape securely tape the remaining wiring loom inside the cavity ensuring it cannot rattle.

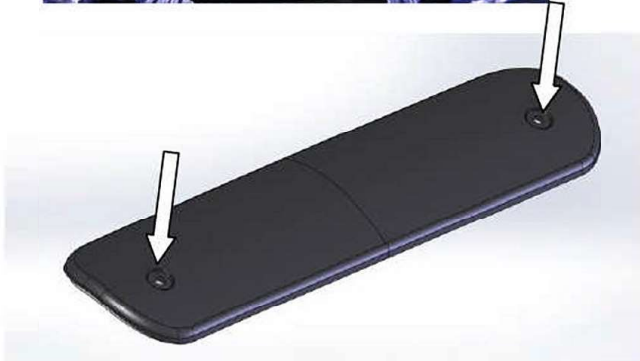

1.7) Ensure the foam tape seals are correctly fitted around the edge perimeter of the covers inside surface and the sealing disc pads are over the screw holes on the inside. Carefully pierce the foam sealing discs through the holes in the cover with a sharp point such as a nail