


Batwing Tapered Zip Extension with Door - 33112

Important:


- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.


Fit Time: 10 mins

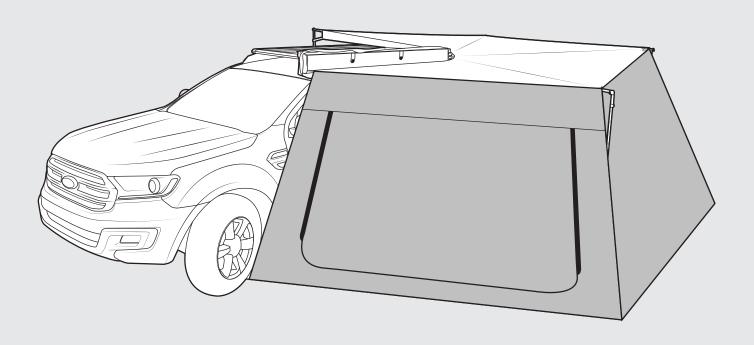


Issue Date: 31/03/2021


Parts List

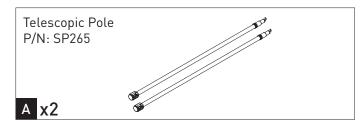

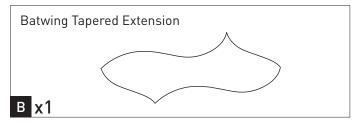





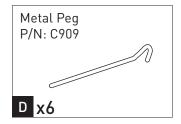


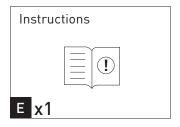

Tools Required T1 - Rubber Mallet

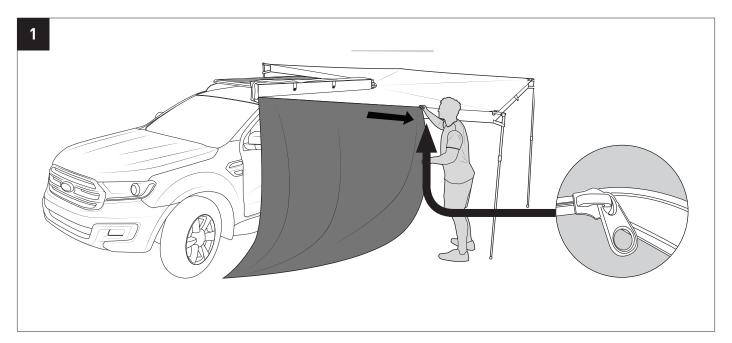

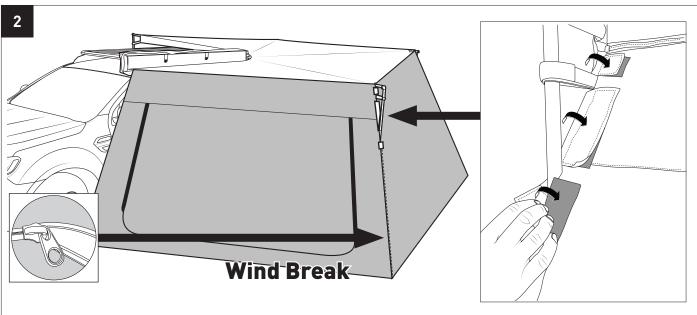

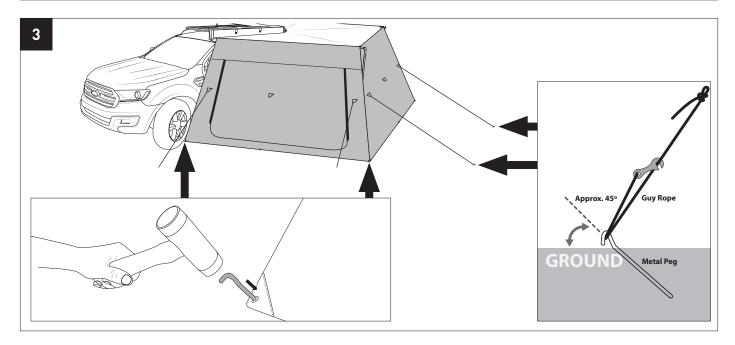

33112 Instructions

